



ELJO SYS 4K-869MPV13

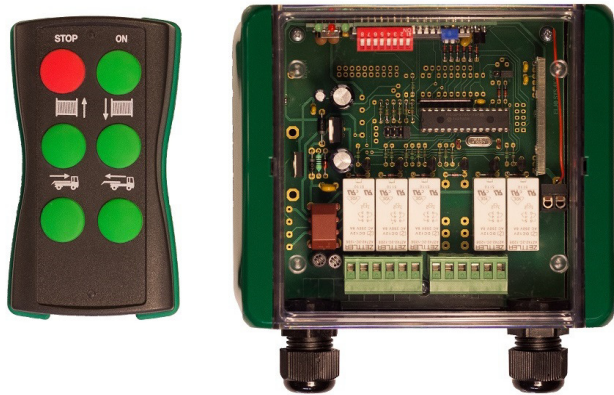

receiver ELJO SYS 4K-869MPV13

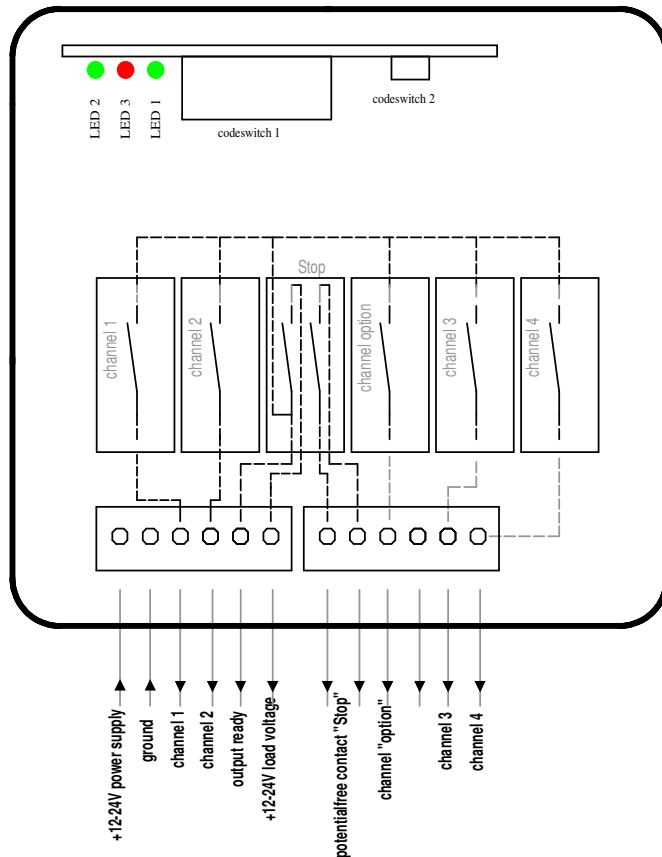

Commissioning

The SYS 4K-869MPV13 radio remote control system consists of the individual components SYS 4K-869MPV13R (receiver) and the SYS 4K-869MPV13T (manual sender). The used radio modules have obtained an approval the BZT (Federal office for approvals in the area of telecommunication) and CEPT. The operation is free of charge. A special request at the post office is thus not necessary. Approvals also exist in several European countries. The certificates of approval can be made available on request.

The radio remote control system can be used for control of external resistive load with a max. load voltage of 24VDC and 5A.

The customer is solely responsible for use of the components especially as the duty cycle is concerned. The standard version contains an emergency stop of the cat. 0 that can be initiated automatically or manually. (see emergency stop)

With this version integrated filters also permit to operate the receiver in interference-polluted environments in a better way than with standard systems. (see section multiple scanning)

Security against interferences, however, cannot be guaranteed with radio remote control systems in this frequency range.

Electromotors and any kind of switching electronic circuits can be interfering components. A sufficient interference suppression must be observed if these components are located close to the system.

Operation

The frequency range of 868MHZ-870 MHZ is applied for high-frequency systems for industrial, scientific, medical, domestic and similar purposes (ISM). A protection against interferences caused by the devices and radio remote control systems mentioned above cannot be guaranteed when operating in this frequency range.

Warning note

The use of this remote control system is only permitted for devices and systems where a radio interference in the sender or receiver does not cause a damage on persons or objects. Additionally a higher-level emergency-stop system which can be activated manually should be integrated with the component to be controlled.

The remote control of devices and systems with increased risk of accident is not allowed.

No type of crane product is allowed to be used in conjunction with this system.

The guideliners acc. To ZH1/547 are not fulfilled.

This remote control system must only be operated in areas where the operating area of the system is clearly visible.

We are not responsible for damages caused externally such as interferences or negligent operation by the user .

Mounting

Mounting, setting and maintenance is only permitted by authorized personnel. With outdoor installation the receiver housing must be fitted so that it is protected against direct solar radiation and driving rain.

Mount the device on even ground since water may enter with deformation of the housing. Fixing holes are located in the adjacent chambers of the housing.

Cable outlet towards the bottom.

Ensure correct connection of all cables. Once all components have been connected connect supply voltage.

Supply voltage

Connect the 12...24VDC supply voltage after the settings mentioned in the following have been made. (observe polarity). When the connection is correct, a green LED (LED1) flashes.

It is not allowed to connect 115V or 230V .The system will be damaged, no guarantee

Coding switches

Sender and receiver are assigned via the coding switches. (receiver: coding switch 1)
The coding of the sender and receiver must correspond. An asymmetric coding must be selected in order to protect against unauthorized switching of the channels. The coding switch 1 in the receiver must be coded before connecting the supply voltage, **i.e. first set the same code for sender and receiver before connecting the receiver.**

function

The radio receiver operates with 4 switching channels and an emergency stop- class 0- which resides above the other channels. After connection of the power supply the system starts in the "Standby mode". A green LED (LED1) flashes. When in this position, no transmission is possible. After "ON" button has been activated for around 3 seconds, the system is active. This position is signaled by a green LED light (LED3) on the main circuit board. The integrated stop relay is initiated and only after this activation can the winch in and winch out function be used. If the receiver recognizes a valid signal, a red LED light (LED2) will light up on the receiver. For each channel there is a relay switch, which switches the connected power and is turned on when the button belonging to this channel is activated on the transmitter. Note: It is very important to keep the maximum electrical current in mind. The system will shut itself down if there has been a five minute time period with no transmission. Afterwards the system reverts to standby mode.

Emergency stop automatic stop of the category 0 type.

When the red button on the transmitter is depressed, the emergency stop of the category 0 type takes effect. When this happens, immediately the connection is cut to the relay "Stop" The green LED light (LED 3) goes out. At this point the system is returned to the Standby position. At the point the transmitter can be brought back online by the steps shown above.

Emergency Stop: Automatically activated emergency stop category 0

The system continually tests if there is a similar transmission on the same frequency within the utilization field. If there is interference, the system automatically initiates an emergency stop – category 0. Turning on the unit is, then, only possible when the interference has stopped. The system is also continually checking the strength of its own signal. When the maximum range has been reached, the automatic stop is also initiated. Turning on the unit is, then, only possible when the transmitter is within range.

Multiple scanning

In this operating mode the sent key codes and the set address are scanned and stored twice in the processor. The transferred values are continuously compared with the stored code. If the code does not match with the values for a certain time, the stored information is deleted. Proceed as follows to set this operating mode:

The scanning time can be installed with coding switch B **Attention:** In this operating mode a short delay of the switching relays must be taken into account.

Connection of the antenna

An internal antenna is integrated in the housing as standard. The range of the system depends on local conditions and can be very different. Atmospheric interferences may influence the frequency. Interferences occur due to the operation and switching on/off of electronic devices. High degrees of interference mainly occur due to transmission lines, transformer stations, industrial and electronic data-processing stations. Interference fields of electromotors must also be taken into account. Keep a large distance to the devices mentioned above when installing the receiver. The largest range can be obtained if you keep a long distance to metal items. (Observe the distance to live parts !! Interferences !!) For a better reception we recommend an external antenna which can be ordered by ELJO. This antenna must then be connected on the terminals (see connection diagram) and must be laid out of the housing via an IP 65 screw connection.

Technical Data

Supply voltage receiver	12...24V DC
Rest current receiver	12V typ. 25mA, 24V typ. 35mA
Operating current receiver	app. 50mA per channel
Load voltage	max. 24V DC
Load current	max. 5A per channel
Frequency	FM 869,85 MHz (SRD Band)
Display Standby	green LED (LED 1)
Display reception	red LED (LED 2)
Display ready for use	green LED (LED 3)
Display controlling	yellow LED (LED 4)
Coding	8 bit 256 possibilities
Housing of receiver	Plastics IP 67 150mm x 125mm x 60mm
Manual sender	120mm x 65mm x 25mm
Supply manual sender	3 * 1,5V AAA
Display sending	red LED
Display battery change	red LED

Troubleshooting

problem

Lack of transmission. Green LED light (LED1) is working. When button is pressed on transmitter, the red LED (LED 2) does not function.

Check

Are receiver and transmitter properly encoded?

Solution

Input code for receiver and transmitter (see coding switch)

problem

Wireless control reacts to proper transmitter. Red LED (LED 2) lights up after button is pressed on the transmitter but the solenoid does not switch

Check

Is the green LED (LED 3) on? If not, system is in „Standby“

Solution

Set the transmitter in „Active modus“ Press the buttons winch in/winch out simultaneously for three seconds (see also Stop function)

problem

Wireless control reacts to proper transmitter. RED LED (LED 2) lights up after button on transmitter is pressed, green LED (LED 3) lights up, solenoids switching can be heard but no voltage is measured at output.

Check

Is connector 6 attached to load voltage ?

Solution

Attach connector 6 to load voltage.

Problem

System works for a short period, then stops

Check

Is the system near a source of similar frequency?

Solution

Turn off source of similar transmission.

Problem

Effective area of transmission is too small.

Check

Is the second LED on the transmitter on?

Solution

Install a new batterie.

Check

Is the receiver installed close to an electric motor?

Solution

Move to a location away from electric motor. Add an external antenna.